



# How to assemble a Blu-Baby AP 1 KFm3 Wing

## Spar Assembly

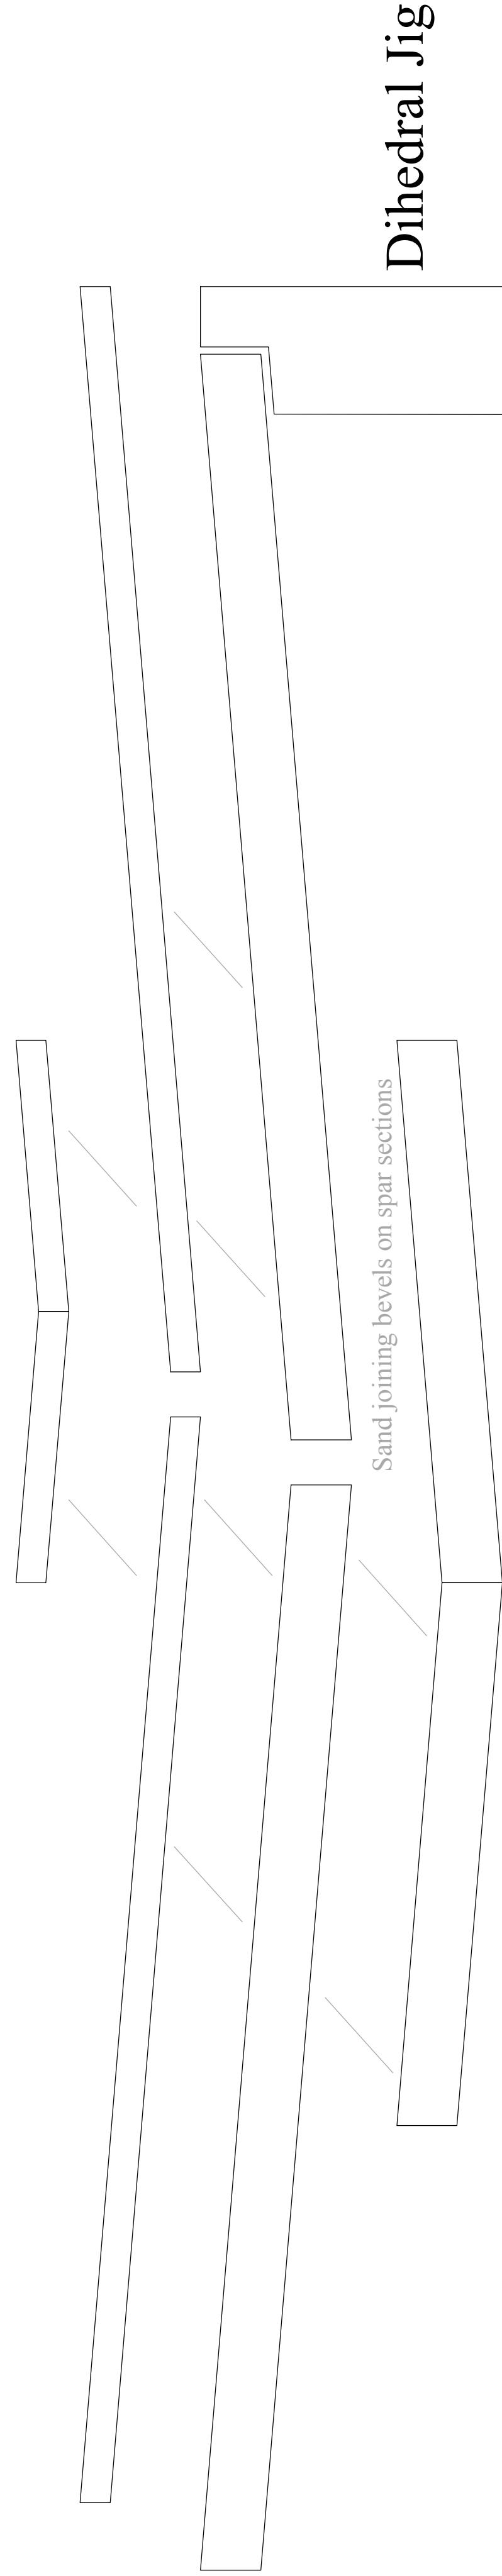


1. Glue one spar onto Forward Spar Joiner, aligning spar with bottom of the Forward Spar Joiner. Use 5 minute epoxy.
2. Tape Dihedral Jig to the end of the other Forward Spar and keeping the glued Spar flat, align with Forward Spar Joiner and Forward Spar. Glue with 5 minute epoxy, maintaining alignment.
3. Glue Aft Spar to Forward Spar assembly with any quality wood glue, maintaining alignment with the bottom of the Forward Spar assembly
4. Glue on Aft Spar Joiner to rear of the Spar Assembly with 5 minute epoxy.


## Wing Panel Assembly

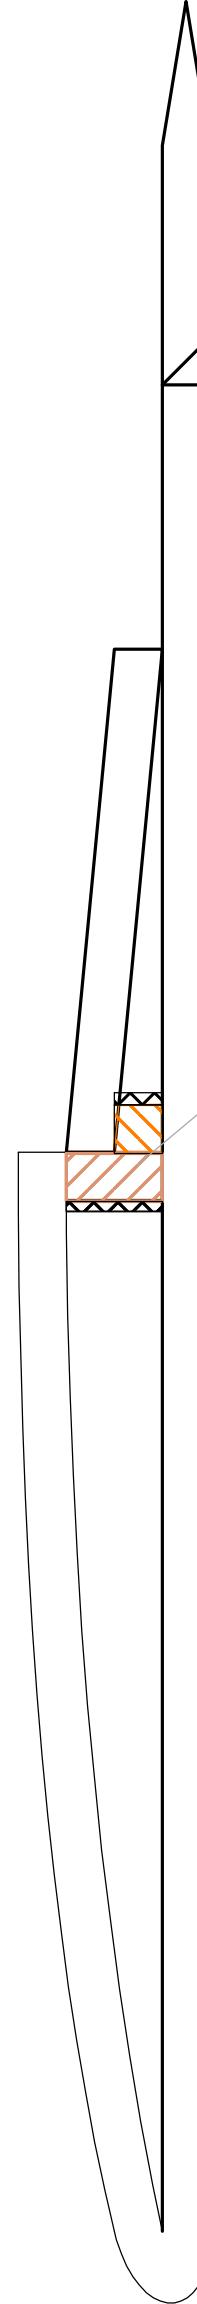

Cut 45 degree bevel on both panels

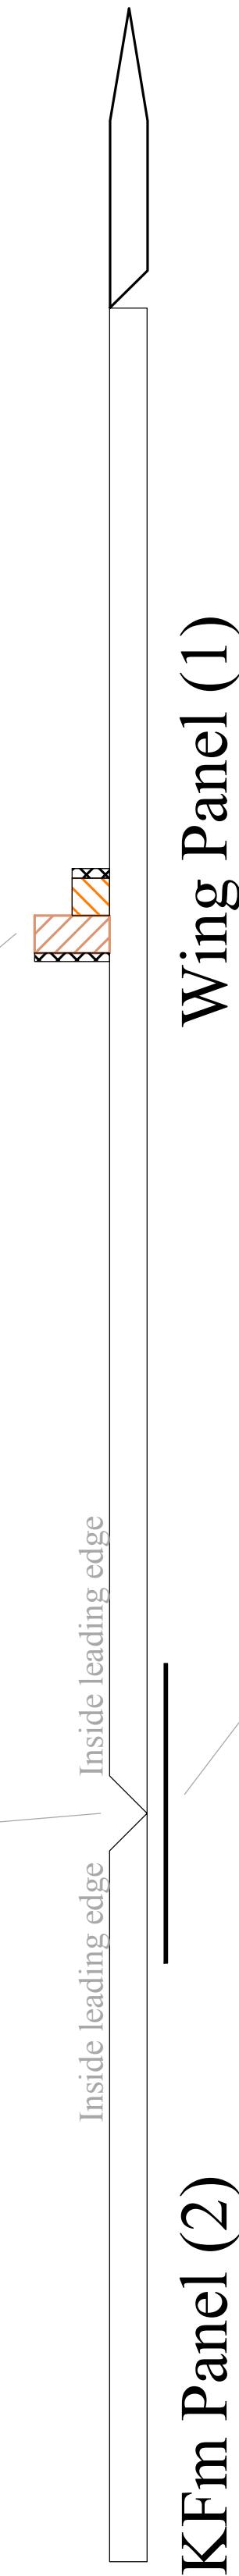

Glue spar assm in place as shown on plan

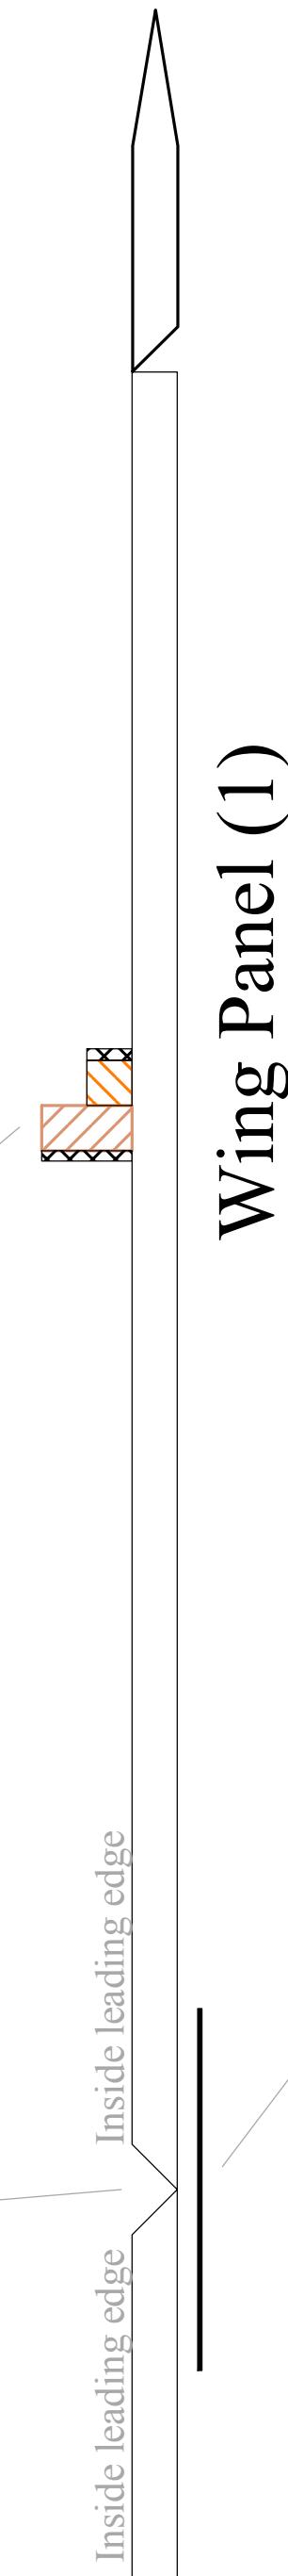

Fold KFm Panel back and over,  
aligning the aft edge with spar.  
Glue with PU glue and weight until dry

