


- materials
- 0.7 mm c.f. rod - 12"
(c/s struts & u/c)
 - 0.5 mm c.f. rod - 10"
(i/p struts, pushrod & tailskid)
 - brass wire - 1.5"
(pushrod ends)
 - 1.5 mm heat shrink - 1"
(pushrod ends)

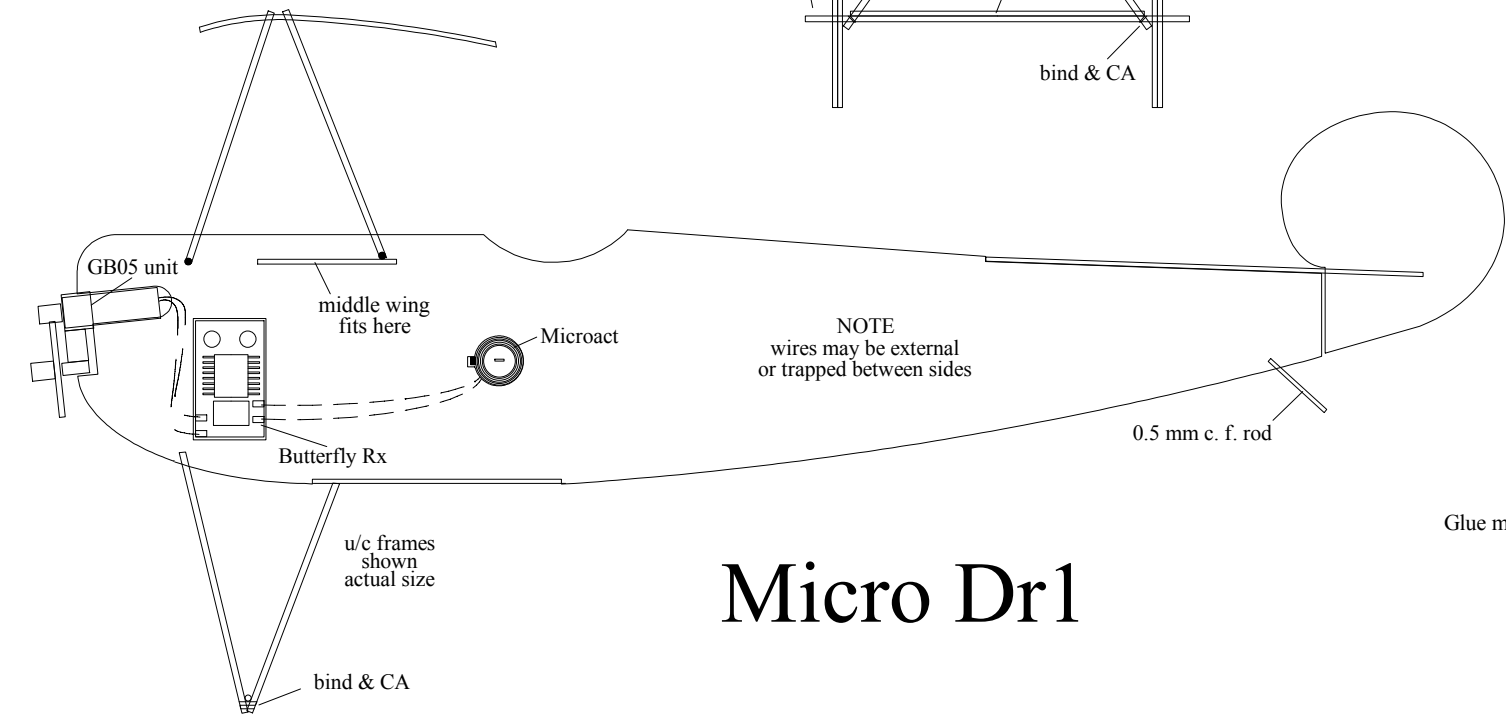

Micro Dr1

- FITTING WINGS**
- Glue bottom wing to assembled fuselage
 - Glue interplane struts into middle wings
 - Glue middle wings into fuselage & struts to bottom wing
 - Glue top wing to interplane struts
 - Cut to length and fit c/s struts in situ
- Don't join middle wings before this stage