


Do not drill the 9.5mm hole (Red Line) until the Motor mount has been test fitted and its mounting holes drilled

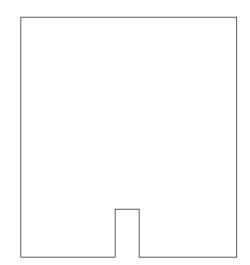

3 off required Material: 2mm Lite-ply

Laminate two together to make rear of Firewall.

Third former forms rear of Fuselage