




MOUNT THE NOSE LANDING GEAR WITH 3 X 10 MM ROUND SOCKET HEAD SCREWS AND LOCK NUTS.



GLUE 8 X 32 MM PLYWOOD INSIDE FUSELAGE.



MOUNT THE MAIN LANDING GEAR WITH 2.6 X 12 MM FLAT HEAD TAPPING SCREW.

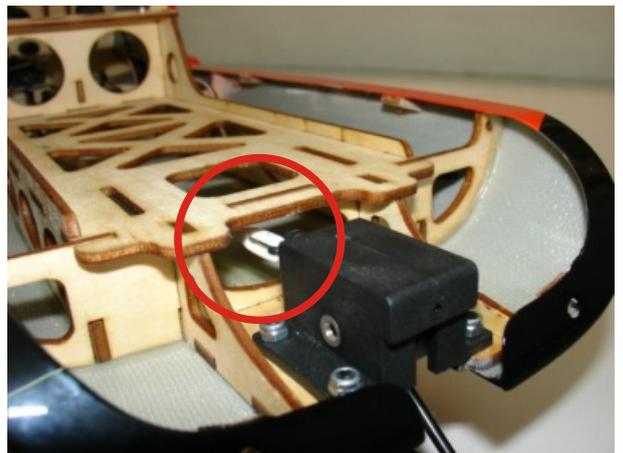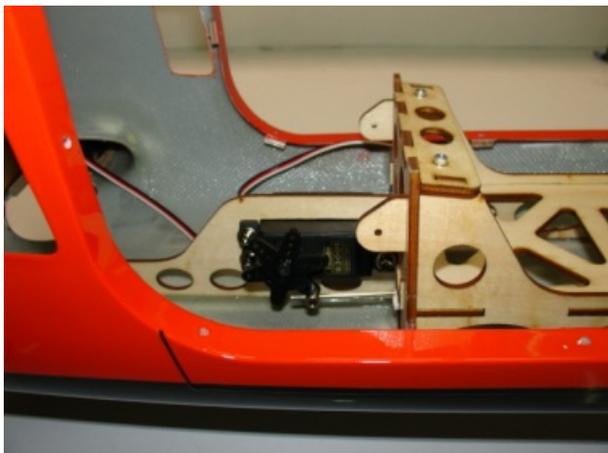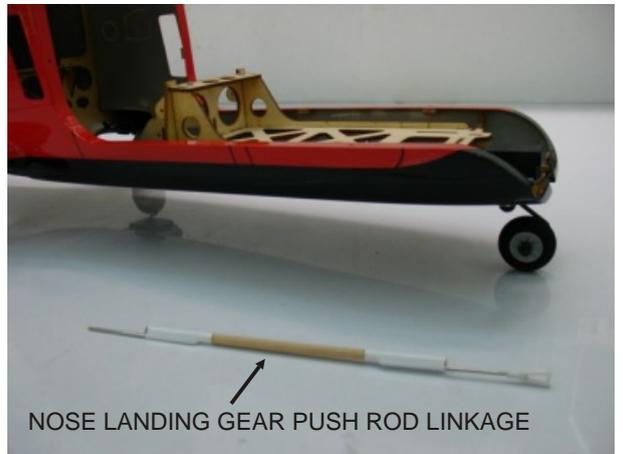





LANDING GEAR PUSH ROD LINKAGE UNDER PLYWOOD PLATFORM



GLUE VELCO TAPE AS SHOWN

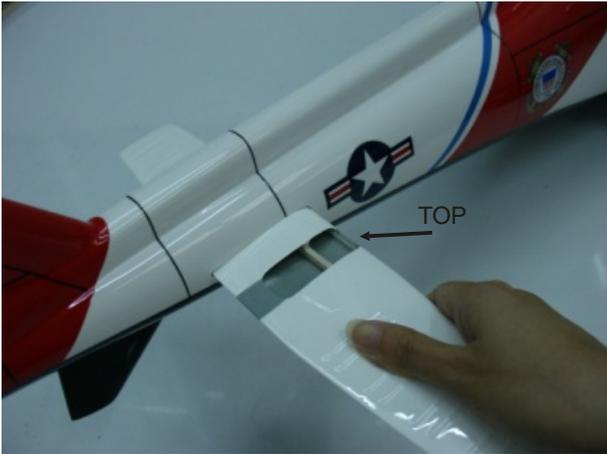


INSERT AND GLUE H. STAB. AS SHOWN

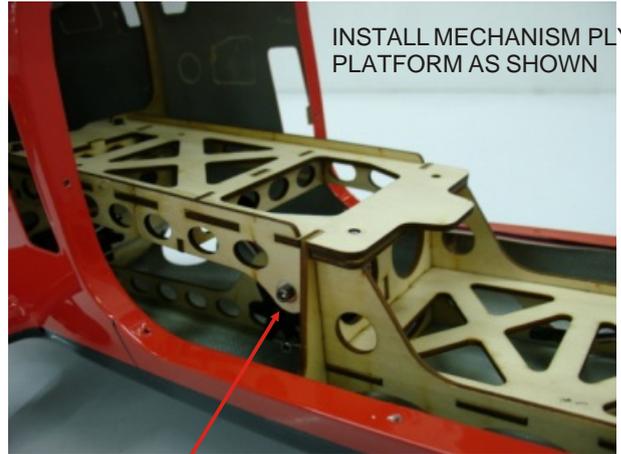

INSTALL MECHANISM PLYWOOD PLATFORM AS SHOWN

FASTEN PLATFORM BY 3x12 TAPPING SCREW WITH WASHER AT FRONT

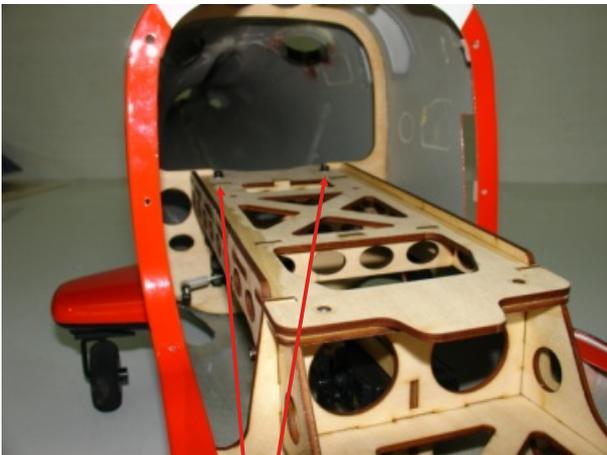

FASTEN PLATFORM BY 3x12 SOCKET HEAD SCREWS WITH WASHER AT REAR





REMOVE THIS FRAME FROM MECHANISM



CUT TAIL GEAR BOX AS SHOWN



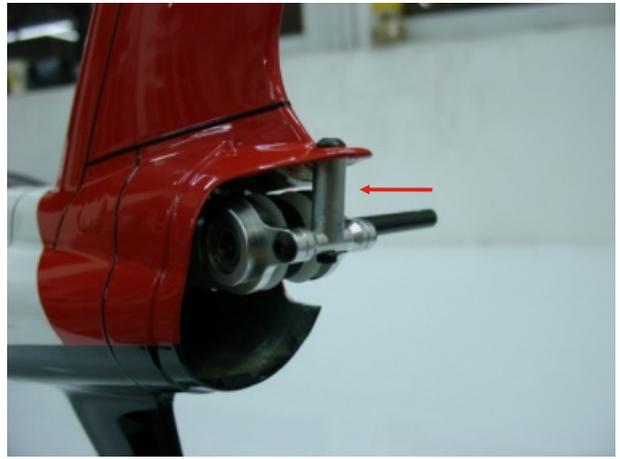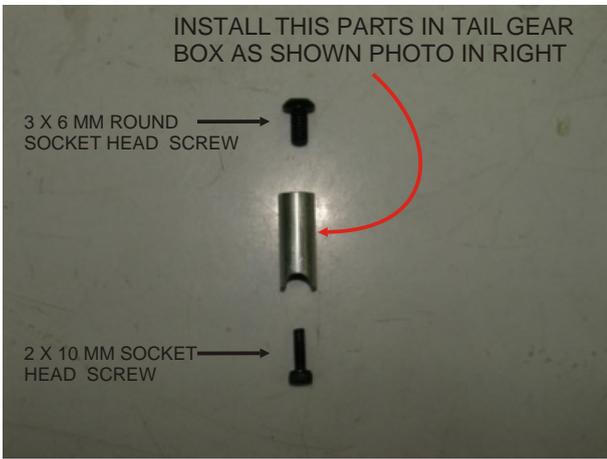

FASTEN MECHANISM BY 3x12 SOCKET HEAD SCREWS WITH WASHER IN FRONT



FASTEN MECHANISM BY 3x12 SOCKET HEAD SCREWS WITH LOCK NUT UNDER PLYWOOD PLATFORM IN REAR



ONE SIDE OF WINDSHIELD IS REMOVEABLE FOR BATTERY REPLACEMENT. IT IS FASTENED BY 4 PC. OF 3 x 6 TAPPING SCREWS WITH 10x10x1.5 PLYWOOD.

