

MOONBEAM II

J.W. KAY


THE RCM & E PLANS SERVICE

MATERIALS REQUIRED

4 SHEETS OF 3/16" X 3' MEDIUM HARD	18 S.W.G. WIRE
4 SHEETS OF 1/16" X 6' MEDIUM HARD	22 S.W.G. WIRE
6 SHEETS OF 1/16" X 3' MEDIUM HARD	BLOCK 6 1/2" X 2 1/2"
2 SHEETS OF 1/8" X 3' QUARTER GRAIN	2 1/2" X 1" X 1 1/4"
2 STRIPS OF 3/8" X 1/4" HARD	HARDWOOD
1 1/2" SECTION 1/2" X 1/8" MEDIUM	1 SQ.FT. 1 MM PLY
18 S.W.G. BUSH	7' OF 3/16" DOWEL
	5' OF 1/8" DOWEL



NOTE: TO WITHSTAND THE STAIN OF HEAVY LANDINGS COVER THE FUSELAGE WITH NYLON OR GLASS FIBRE SURFACE MATTING

ALL WOODS BALSA UNLESS OTHERWISE STATED
BATTERY HATCH TOP BLOCK
6 1/2" X 2 1/2" X 1"

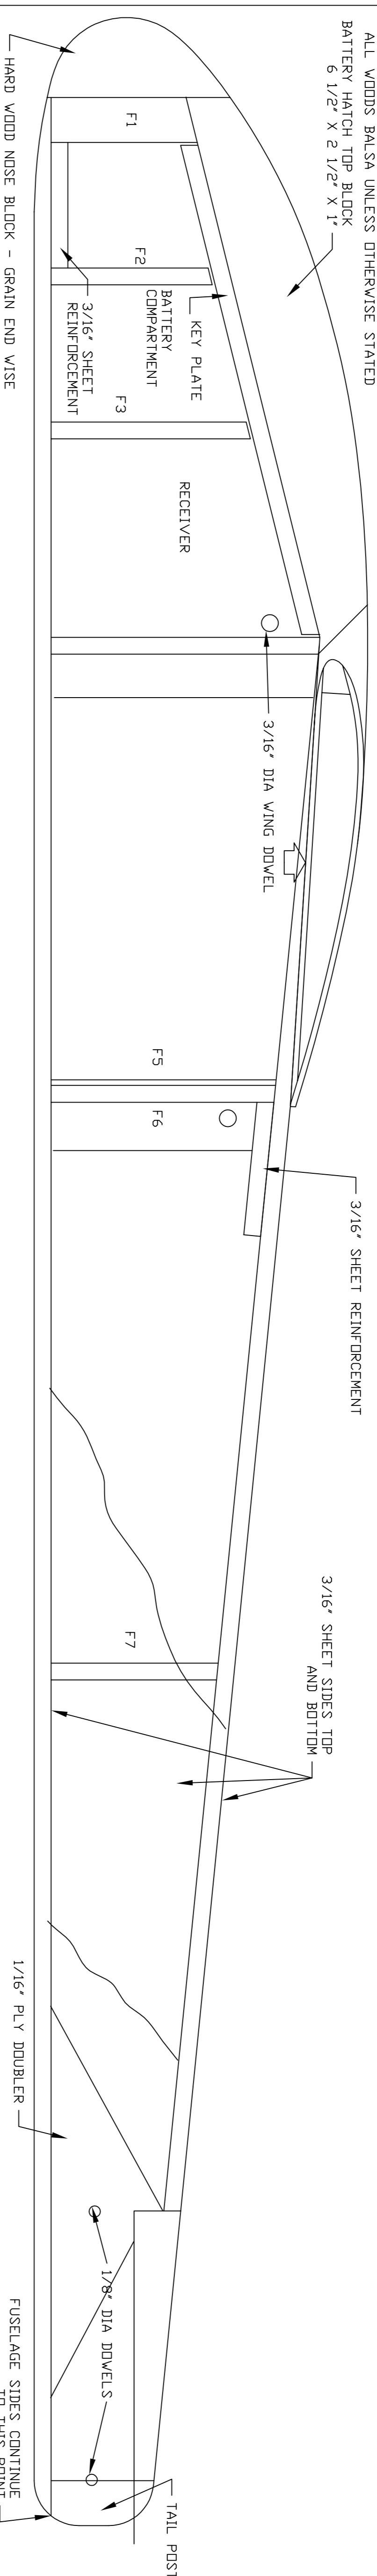

CUT TAILPLANE ON CENTRE LINE
PROP UP 4 7/8" UNDER EACH TIP
BIND REINFORCE CENTRE
SECTION WITH 1" NYLON TAPE
BEFORE ADDING FAIRING BLOCK
(SEE SIDE VIEW).

FUSELAGE FORMERS

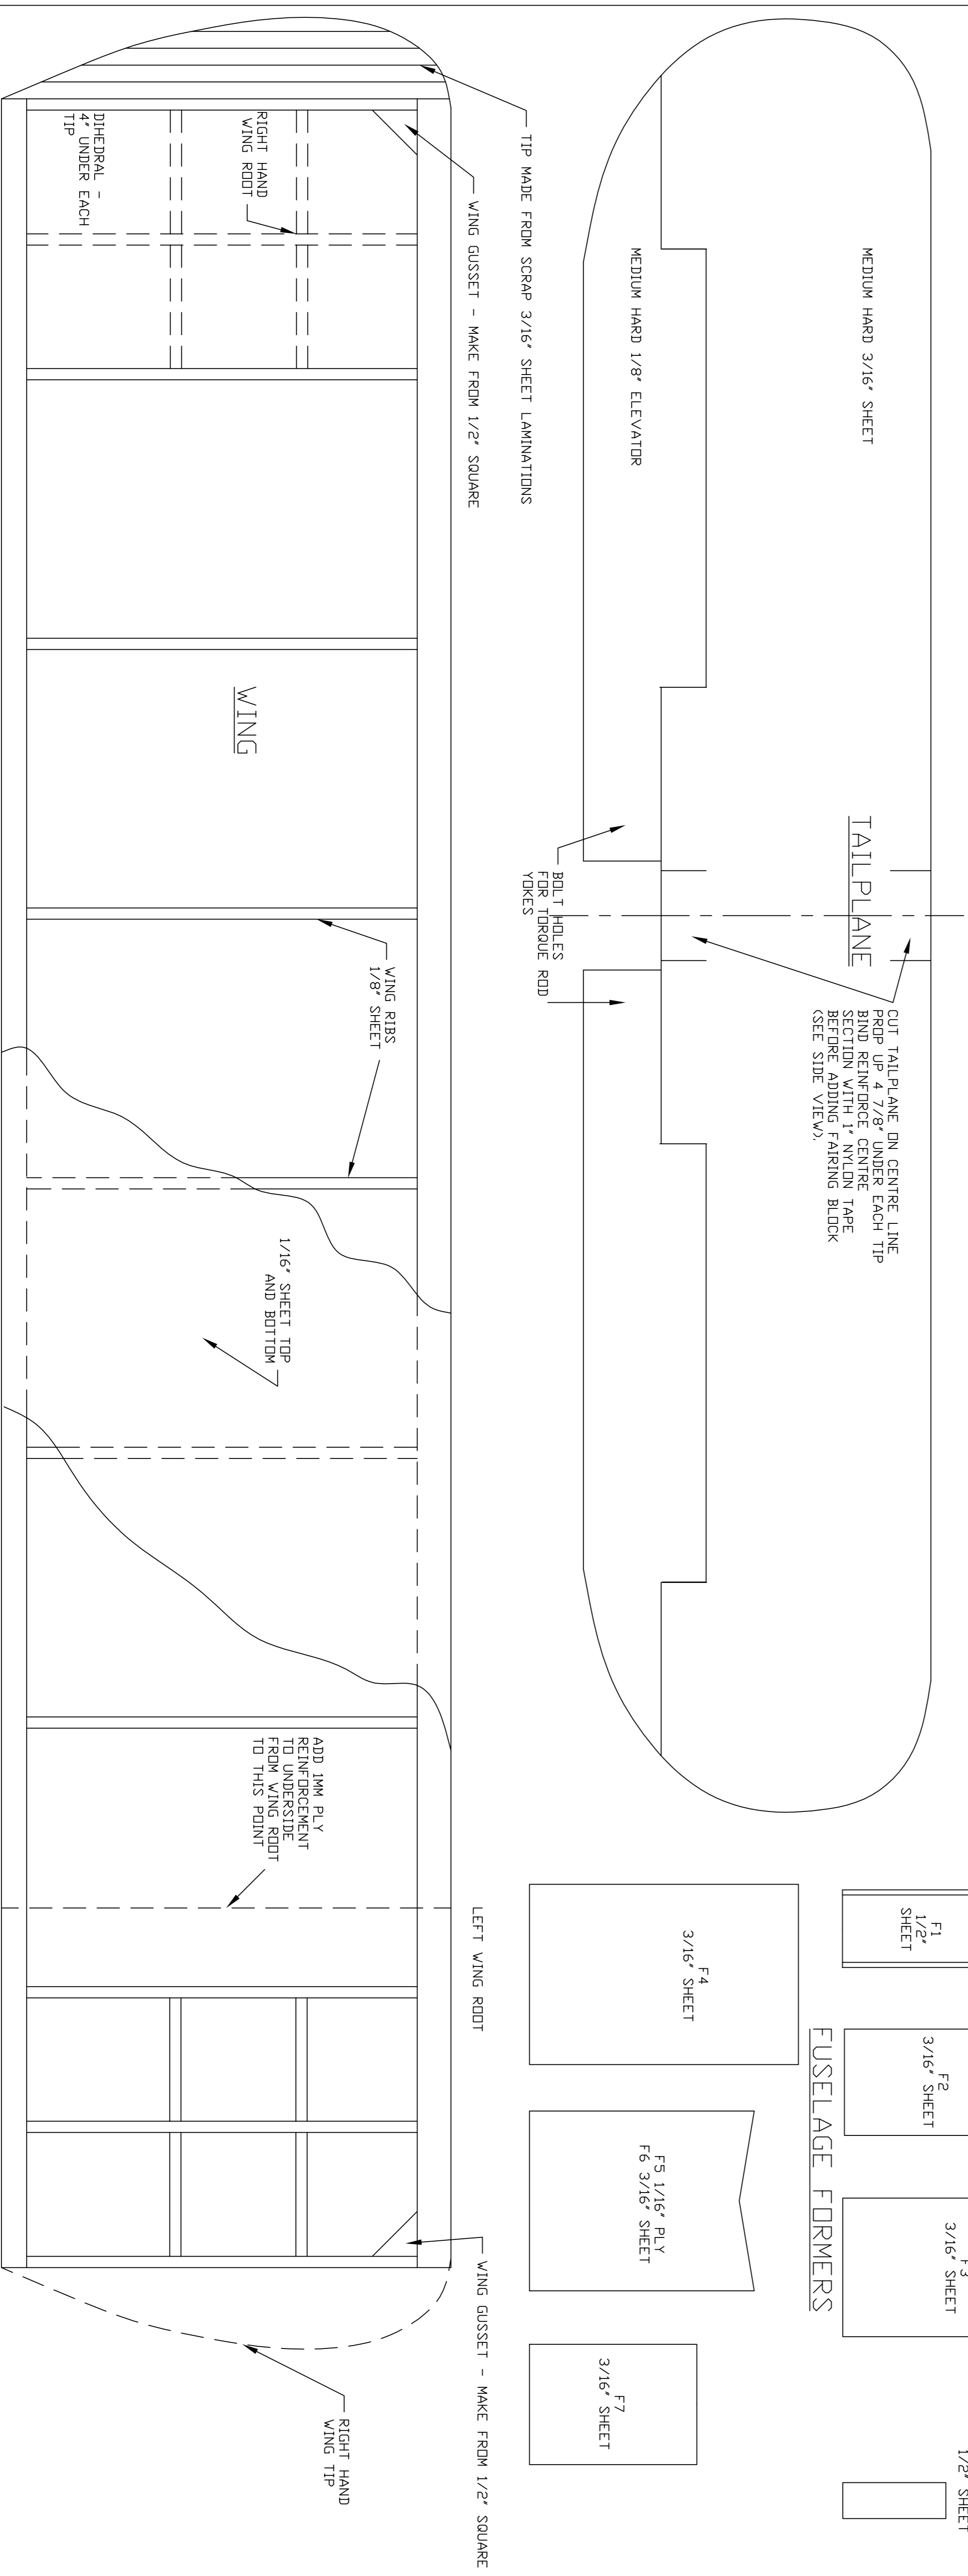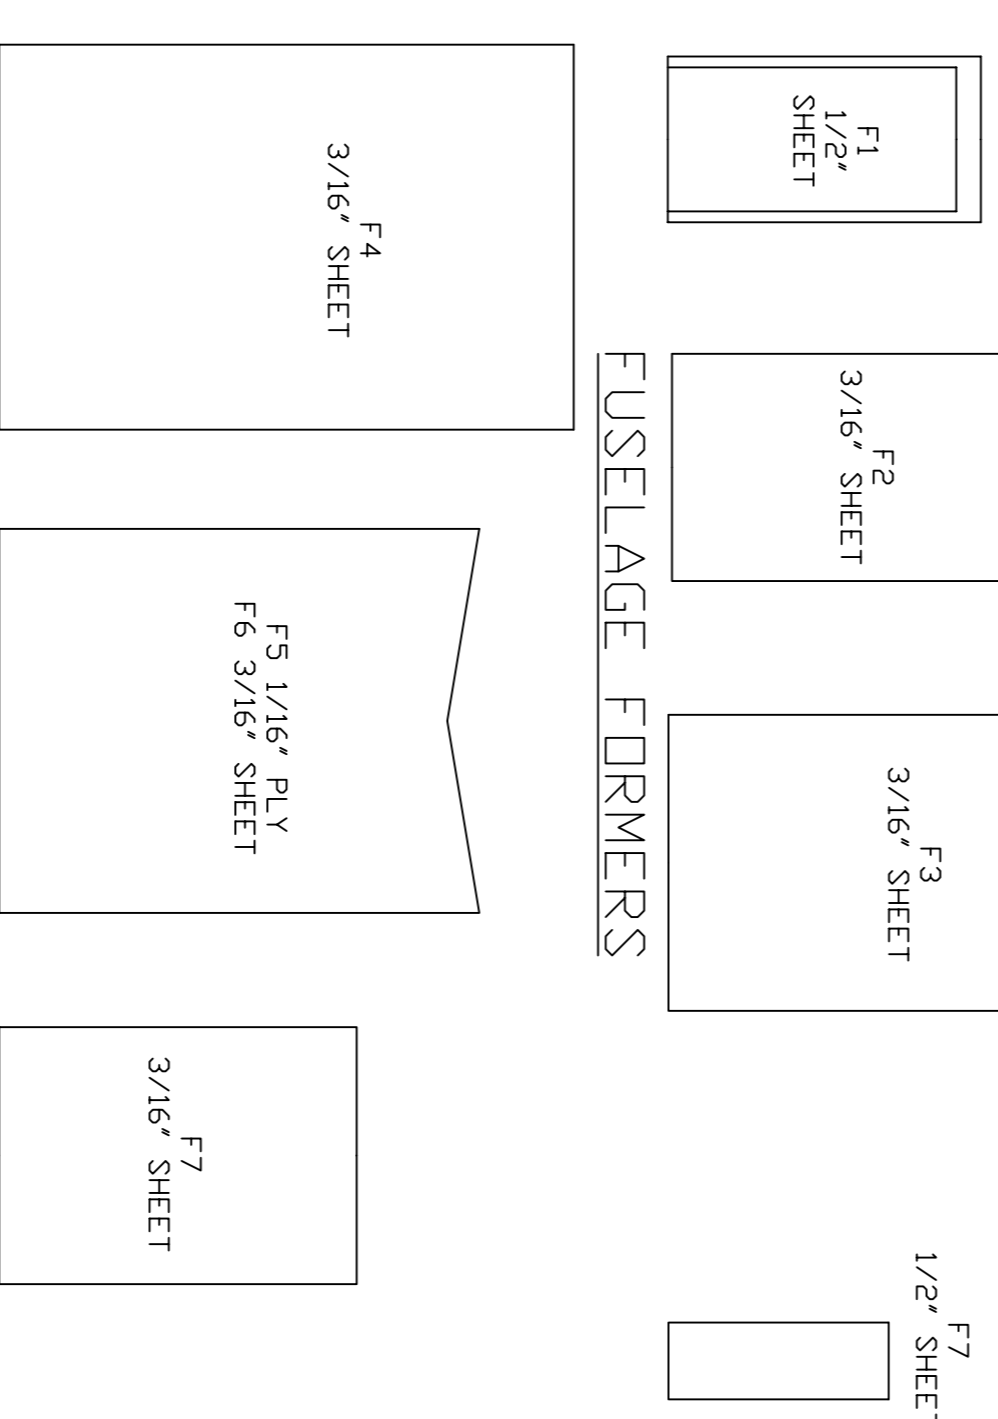

CUT TAILPLANE ON CENTRE LINE
PROP UP 4 7/8" UNDER EACH TIP
BIND REINFORCE CENTRE
SECTION WITH 1" NYLON TAPE
BEFORE ADDING FAIRING BLOCK
(SEE SIDE VIEW).

FUSELAGE FORMERS

