


A

B

||


SNIC

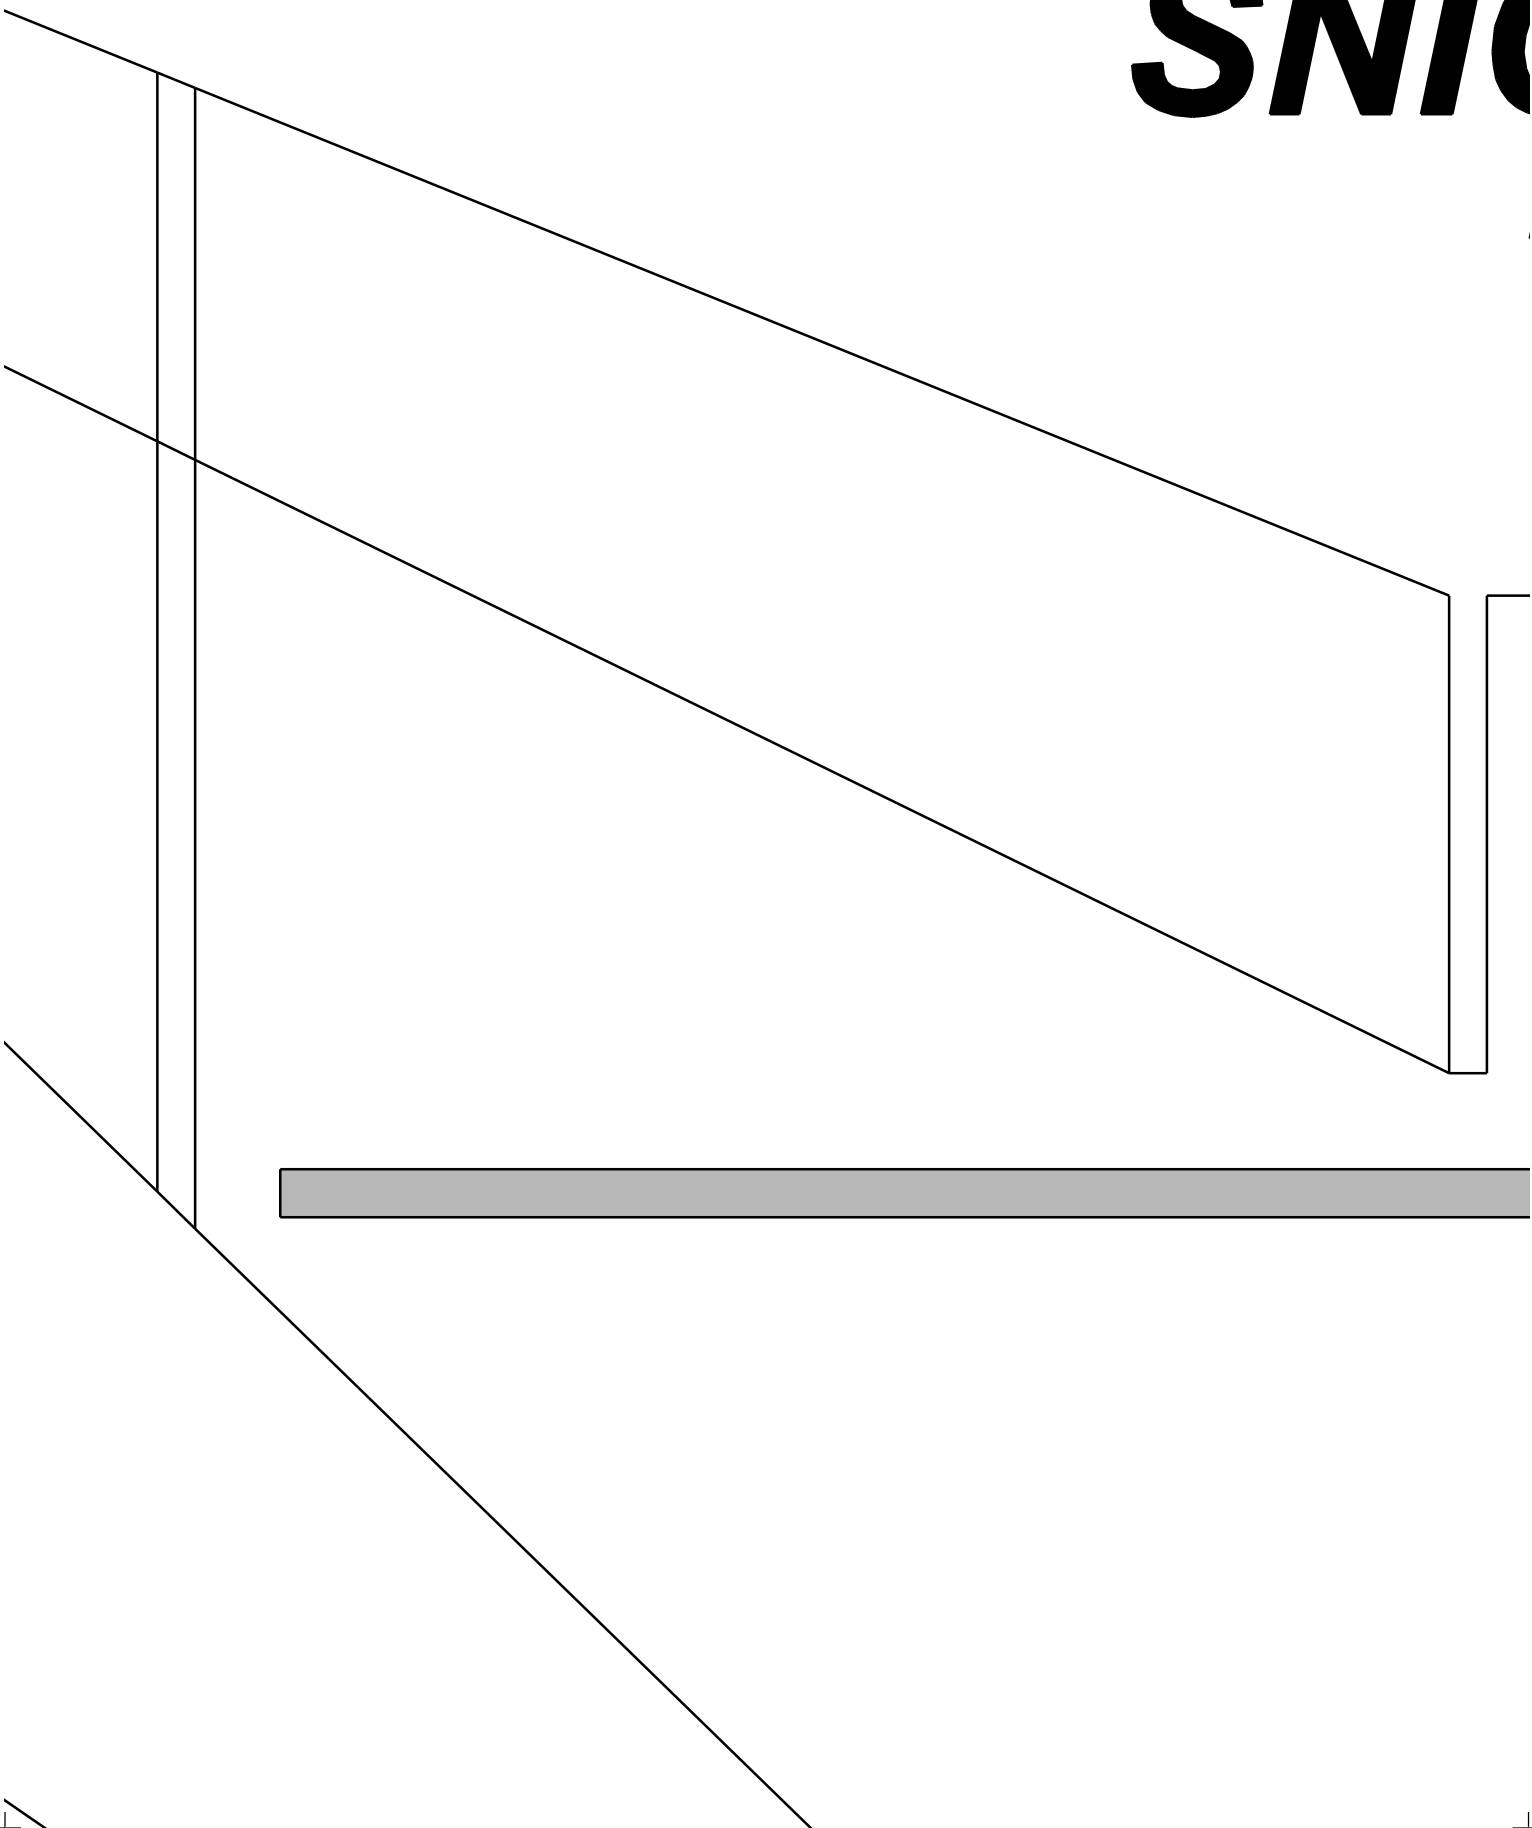

28"

CE-MITAR V1 PA

BUILD AT YOUR OWN RISK!

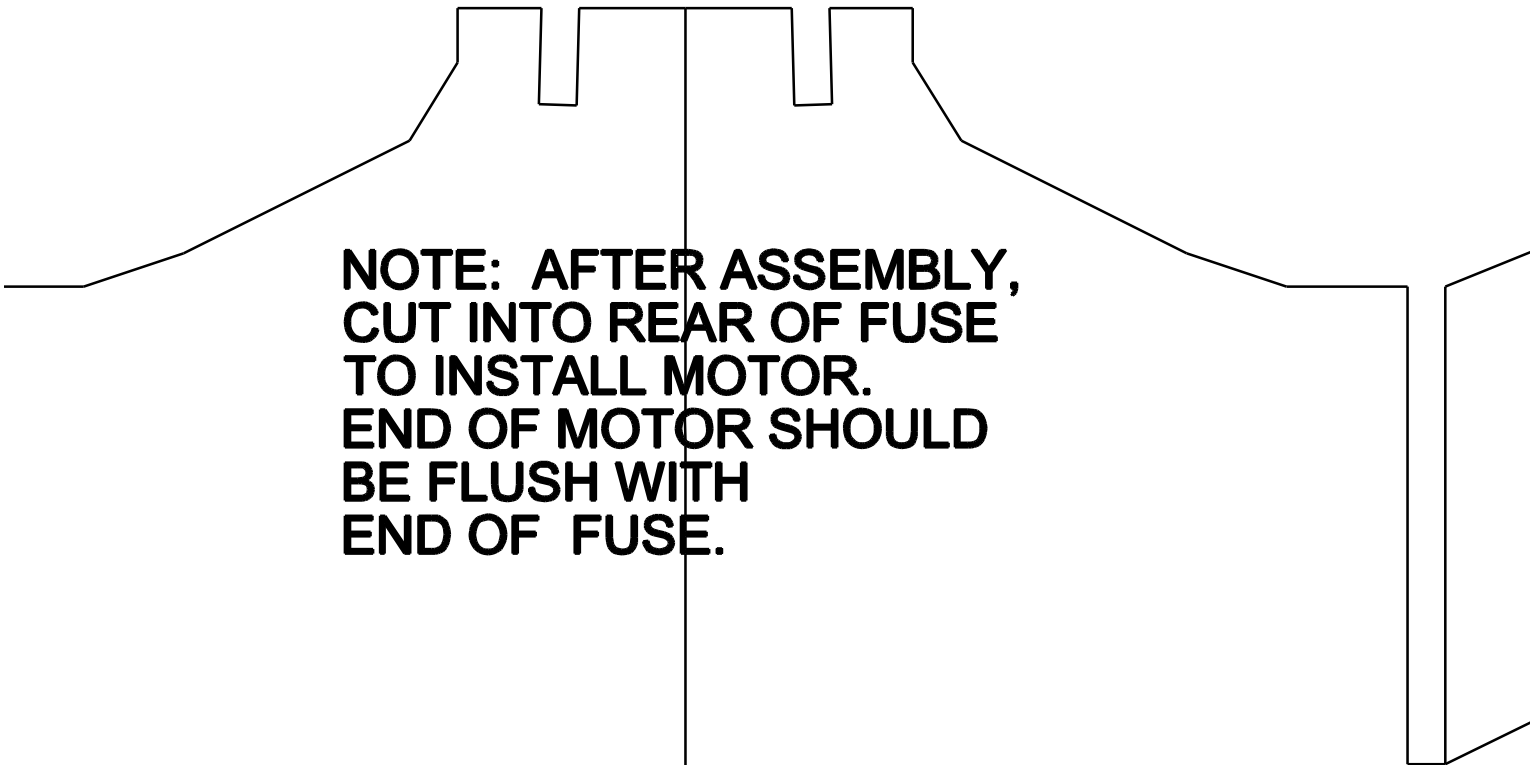


**NOTE: AFTER ASSEMBLY,
CUT INTO REAR OF FUSE
TO INSTALL MOTOR.
END OF MOTOR SHOULD
BE FLUSH WITH
END OF FUSE.**



SPAR PLACEMENT

CG


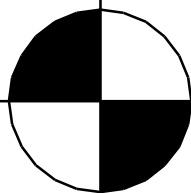



CG

LAN

MENT

V

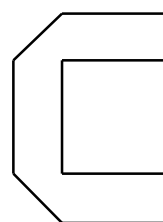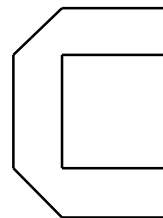


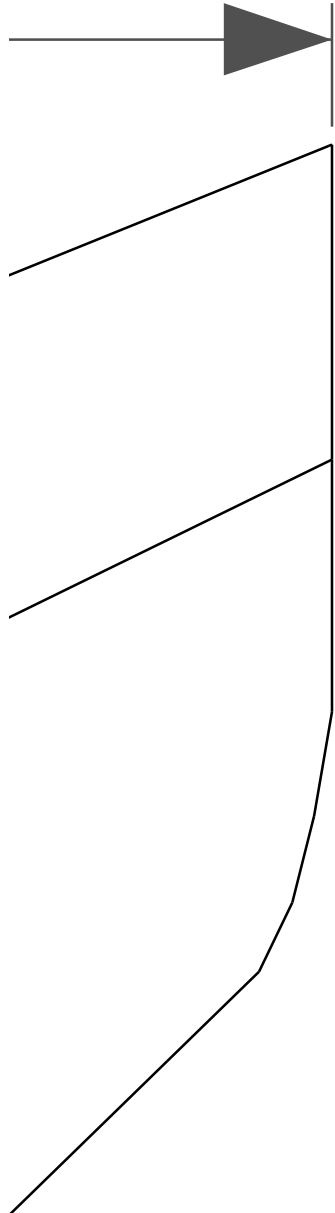


MOTOR MOUNT

LIGHT PLY
TRIM TO FIT

VING FENCES

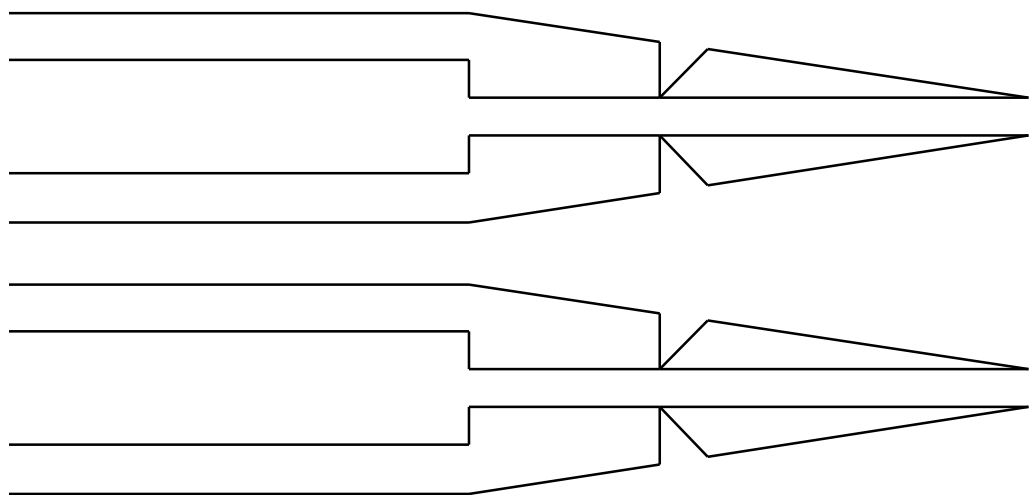


OTTO

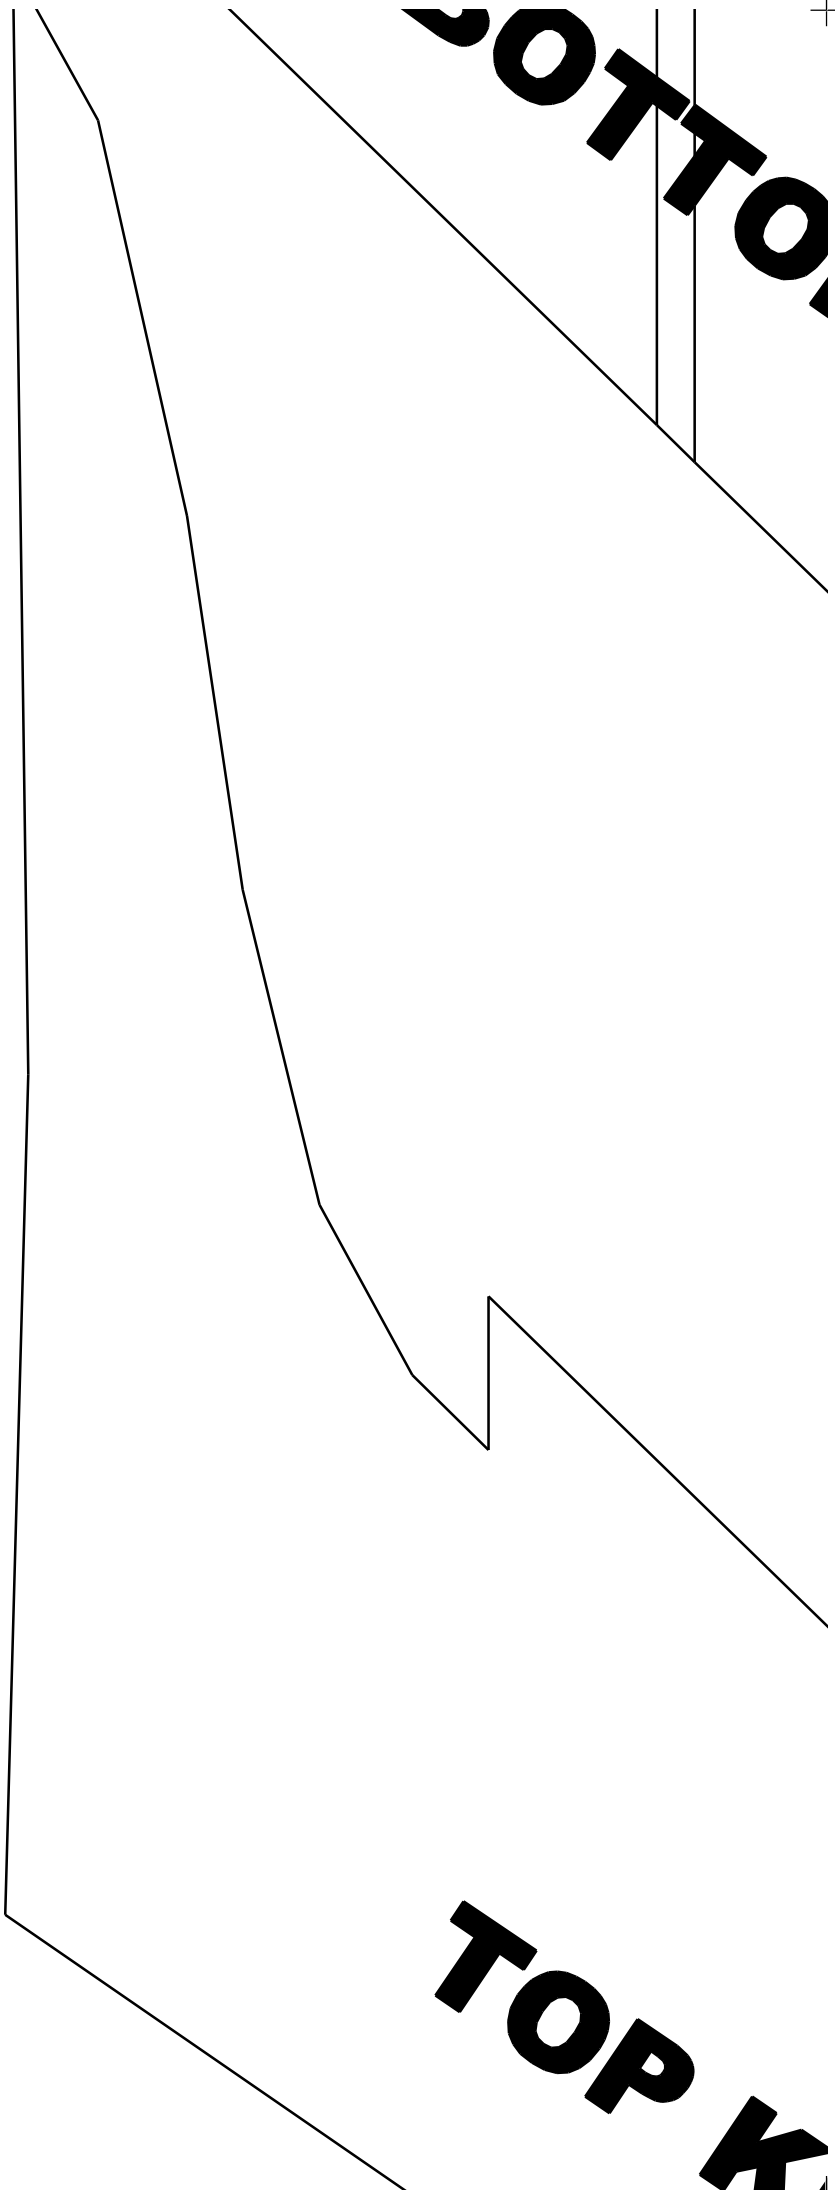

TOP K

M KF PANEL: X2

MAIN WING

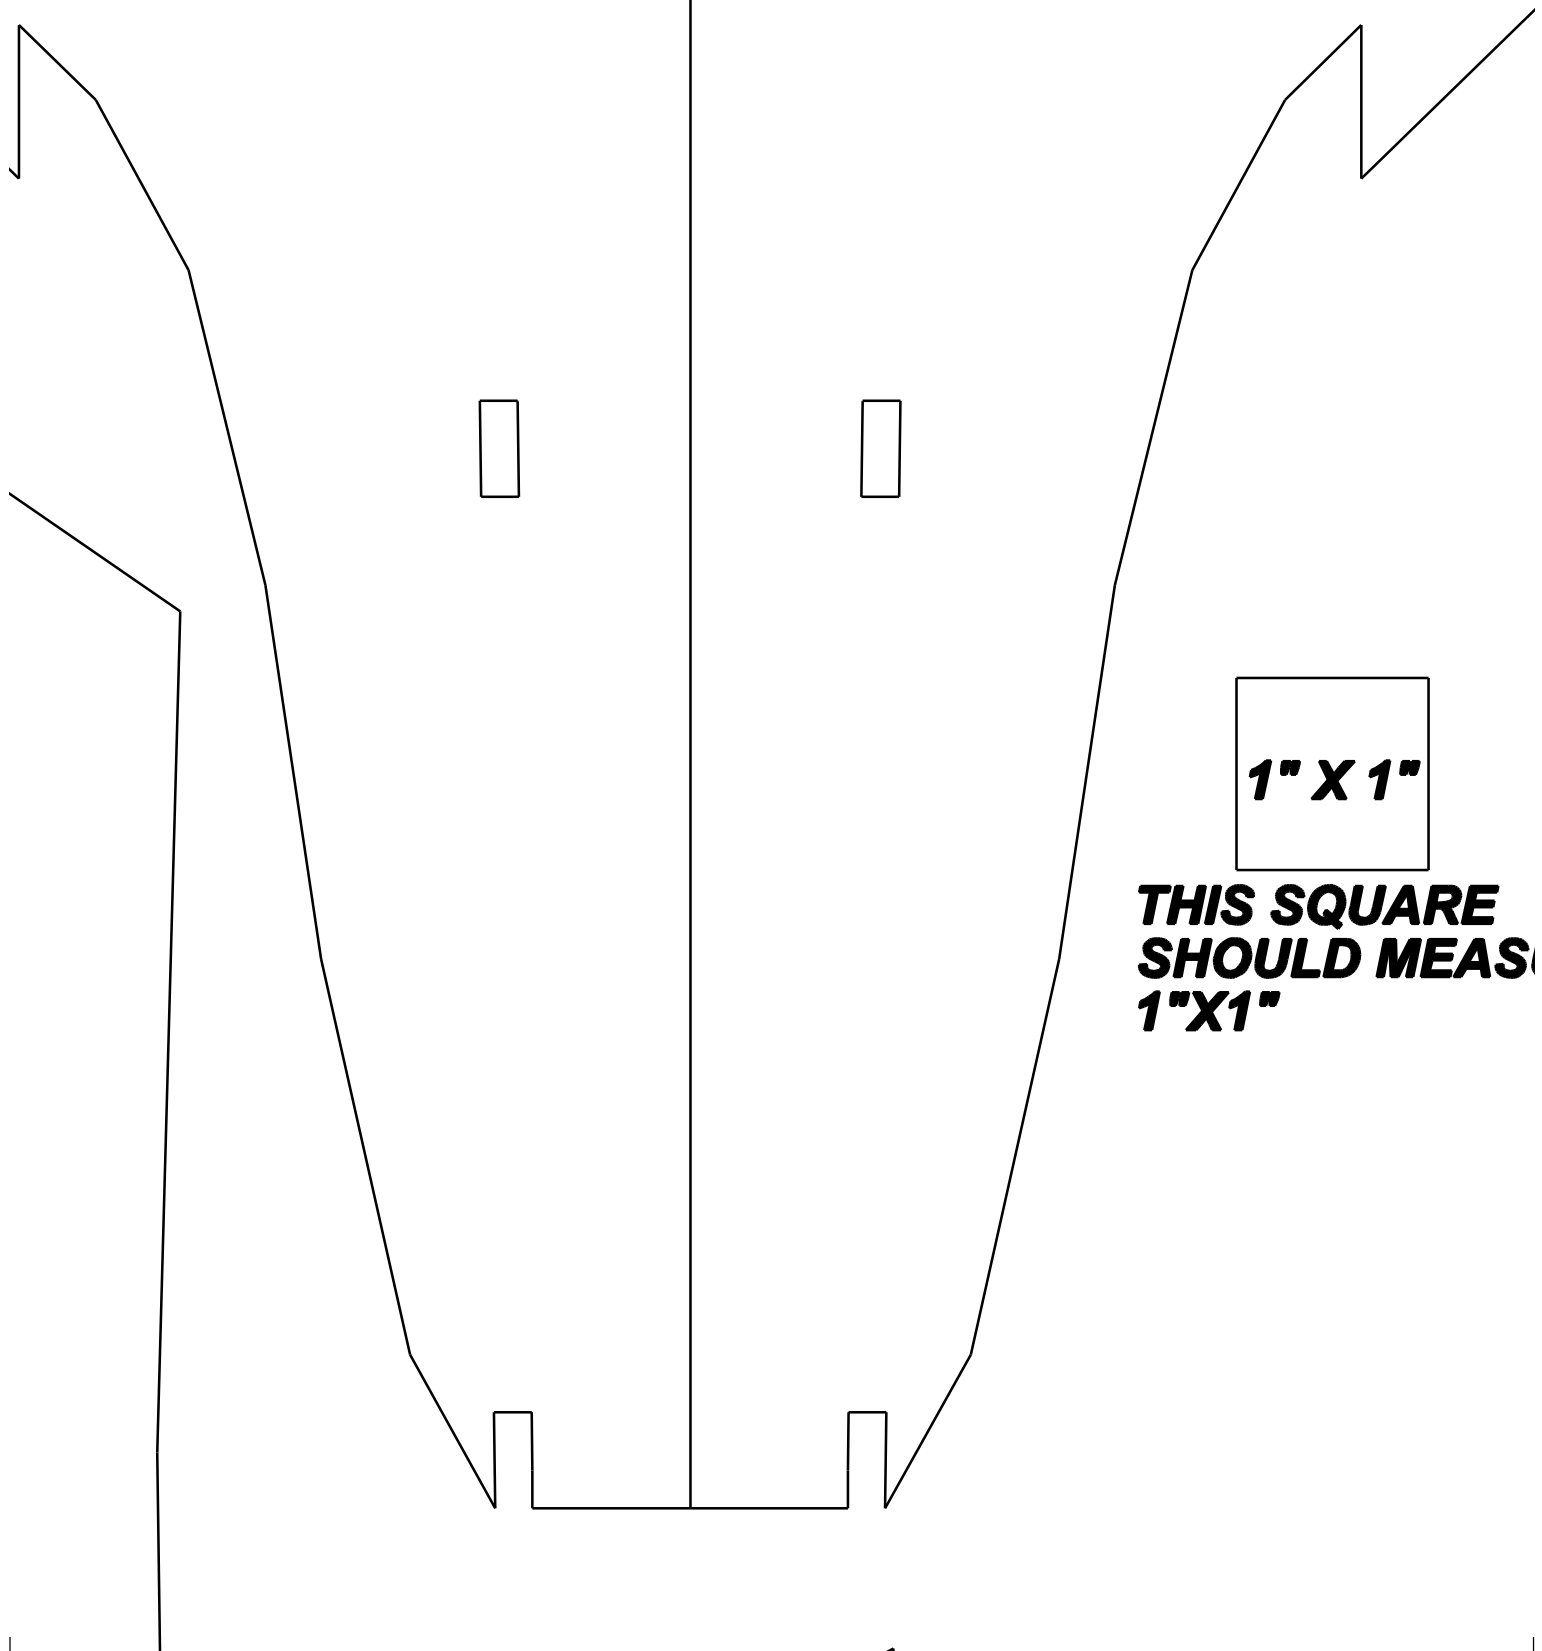

1" X 1"

**THIS SQUARE
SHOULD MEAS
1"X1"**

URE

BOTTOM SKID 1

MOUNT TO INNER SIDE OF RUDDER 1

BOTTOM SKID 2

MOUNT TO INNER SIDE OF RUDDER 2

BOTTOM FUSE

TOP FUSE

SIDE FUSE: X2

**SNICE-MITAR BY S
FOR PERSONAL USE**

E-Z ASSEMBLY G

- 1. CUT PARTS**
- 2. ASSEMBLE MC
FOR TOP FUSE P**
- 3. INSTALL MOTO**
- 4. PLACE ELECTF**
- 5. FIT SERVOS**
- 6. INSTALL TOP F**
- 7. SAND FUSE & |**
- 8. CUT ACCESS F**
- 9. INSTALL SERV**

PANEL: X2

**NICE!
USE ONLY!**


GUIDE:

**MODEL EXCEPT
PIECE**

**FOR AND MOTOR MOUNT
ELECTRONICS TO GET THE CORREC**

**FUSE
WINGS, PAINT
HATCH, COOLING VENTS
MOS & ELECTRONICS**

**MOUNT LITE F
STICK TO B01
FOR PF**

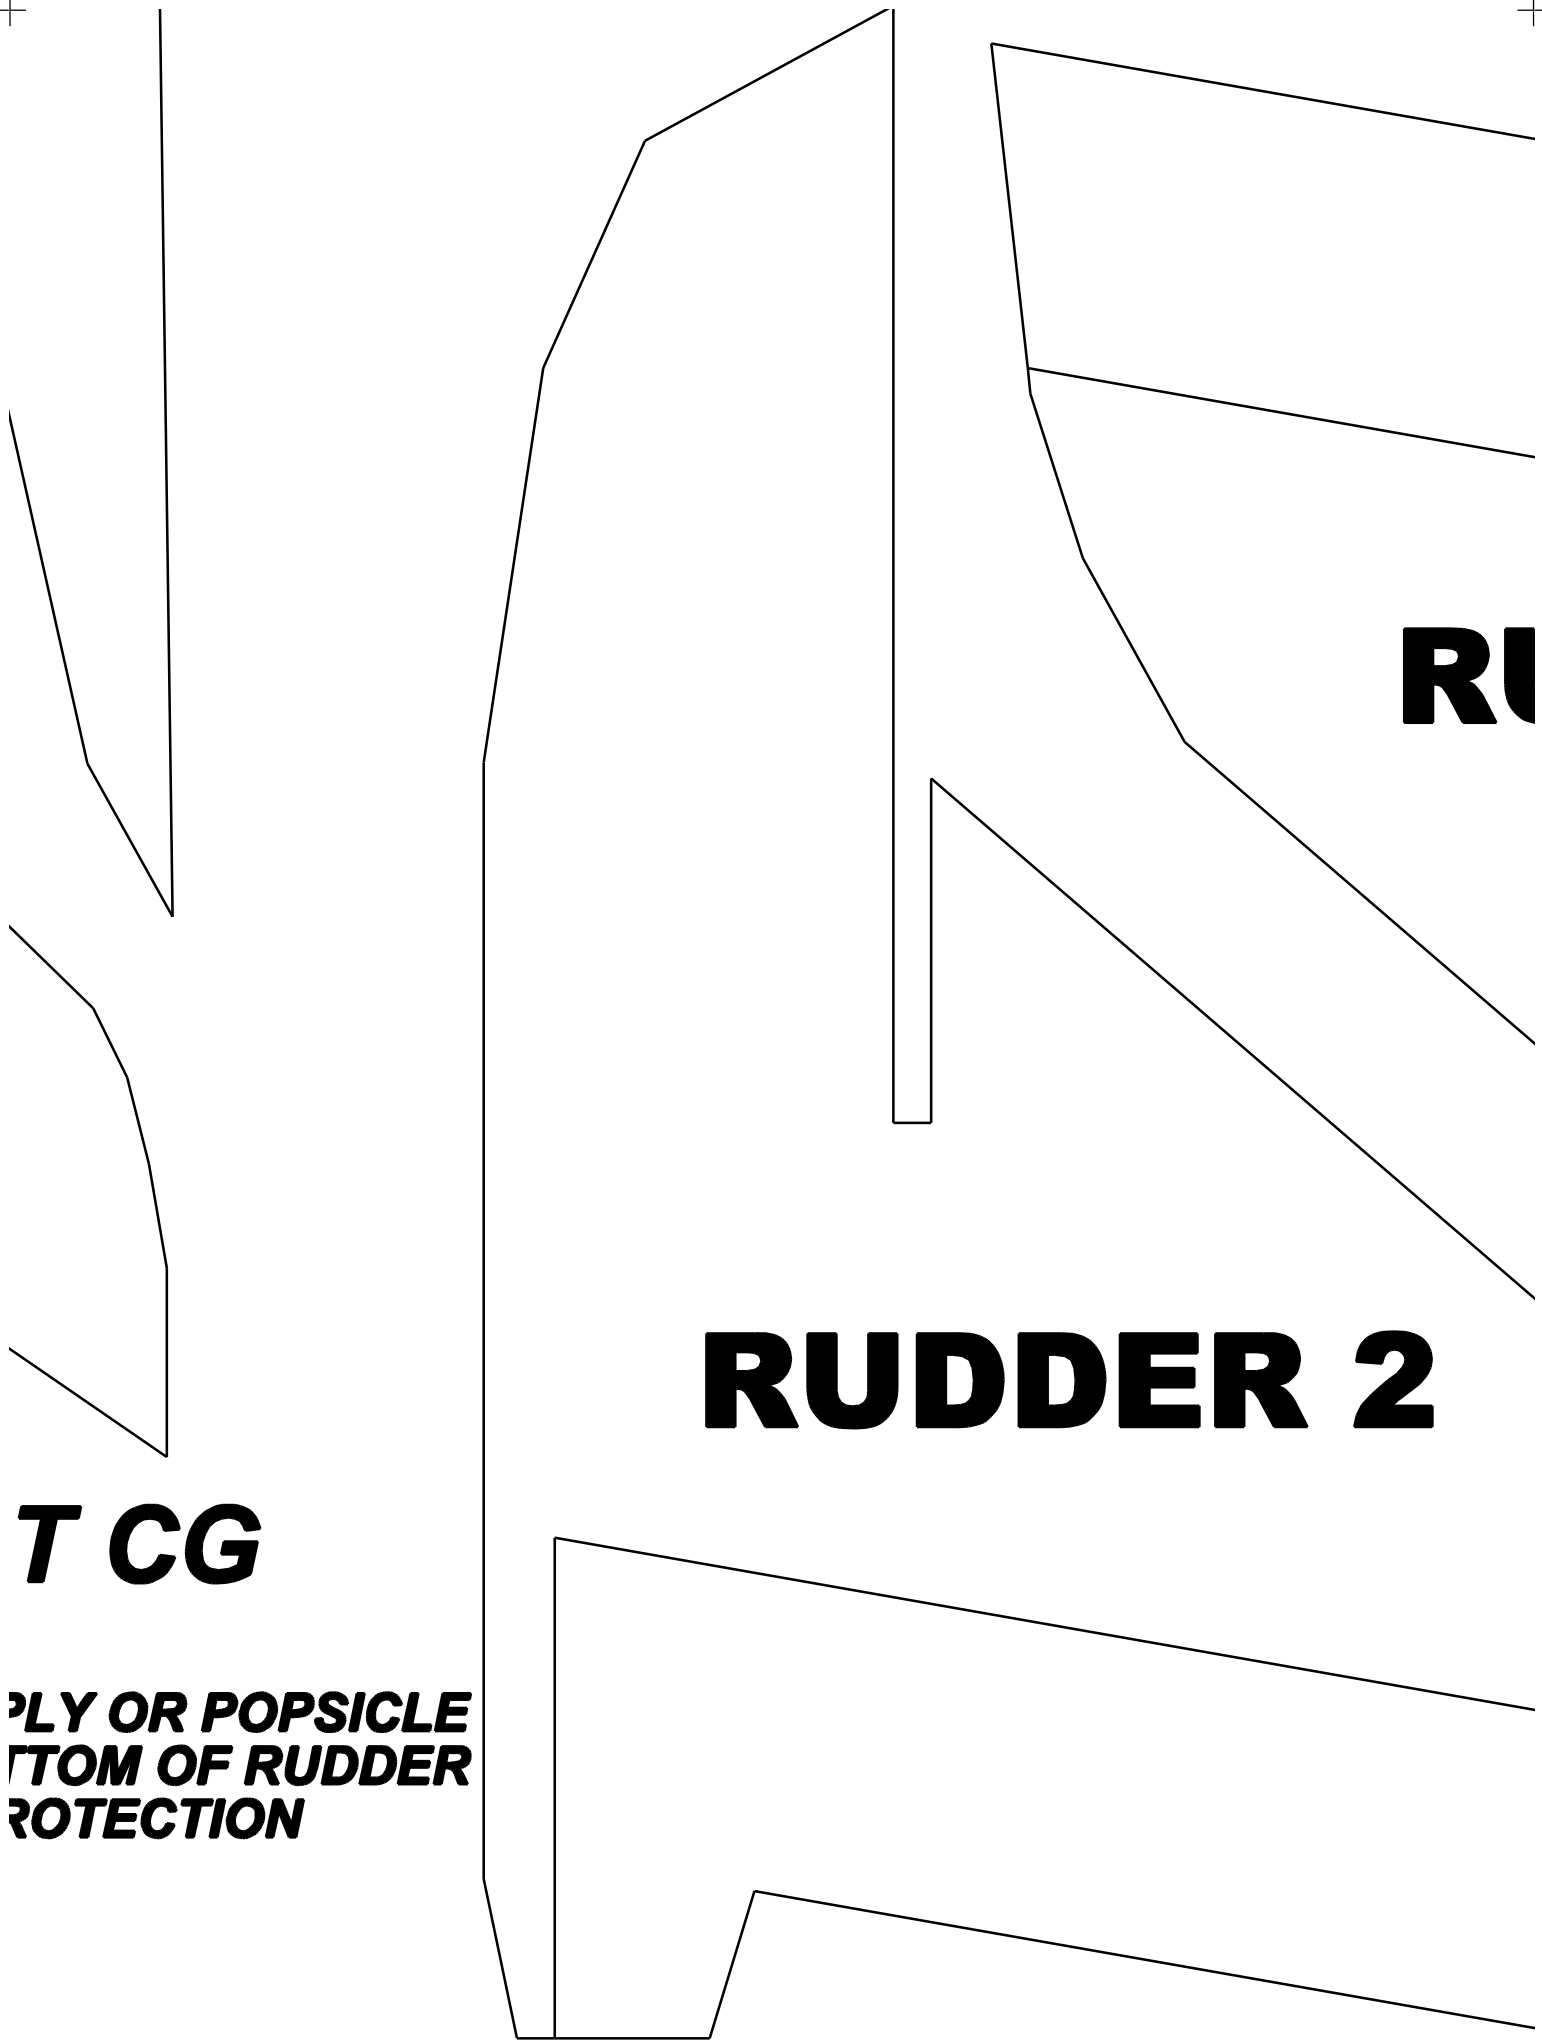


RU

RUDDER 2

T CG

**PLY OR POPSICLE
BOTTOM OF RUDDER
PROTECTION**

FUSE DOUBLERS - TRIM TO FIT

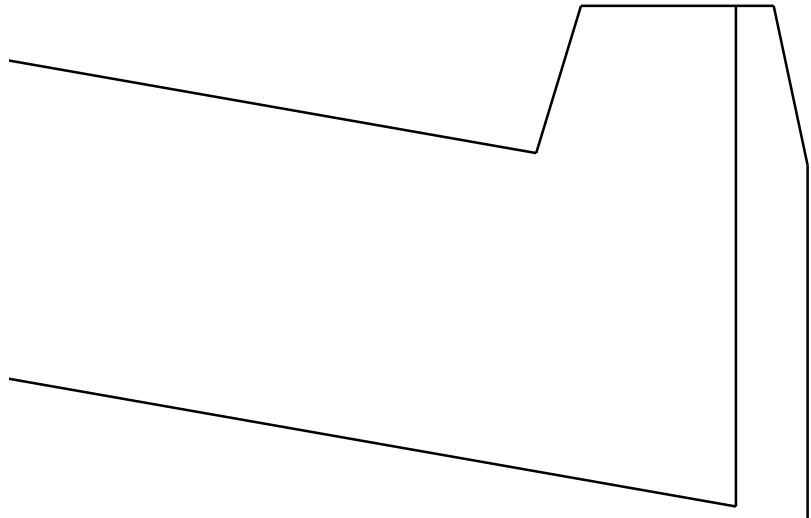

JDDER 1

